



Landscape Brands  
211 N. Lindbergh Blvd.  
Saint Louis, MO 63141-7809  
800-231-1327  
Fax: 314-754-0835

E-mail: [LSBweb@landscapebrands.com](mailto:LSBweb@landscapebrands.com)  
Web: [www.landscapebrands.com](http://www.landscapebrands.com)

## ASSEMBLY INSTRUCTIONS

### Assembly Instructions for **L1336D** and **L1336M**, 32-Gallon Receptacle

#### **Assembly Recommendations**

To prevent scratching on any of the finished pieces, we recommend assembling the unit on packing material (paper and cardboard). Do not drag assembled unit on any surface. The assembly is a two-person operation.

#### **Mounting Recommendations**

For surface mounted product, we recommend the use of stainless steel mounting studs. For any other follow assembly instructions.

#### **Cleaning Recommendations**

For cleaning, use mild household cleansers or soap and water. Do not use vinyl cleansers or protectants.

 
#### **Parts List**

- 1-Receptacle
- 1-Plastic Liner
- 1-Contour or Dome Top


#### **Hardware Included**

- 1-Fabric Tether


#### **Tools Needed**

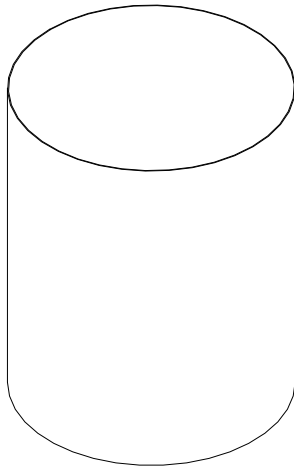


Receptacle

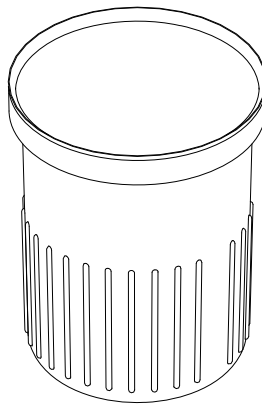 

Plastic Liner

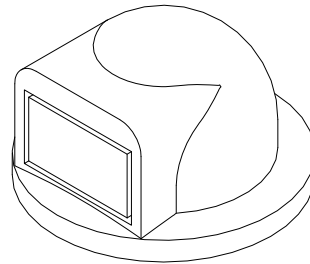 

Dome Top

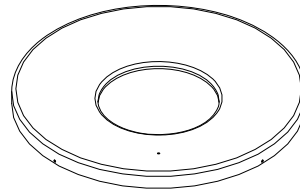 

Contour Top

# ASSEMBLY INSTRUCTIONS

Fusion Coatings, A Division of RTM, Inc.

1101 East 8<sup>th</sup> Street

Winona, MN 55987

Toll Free: 1-800-367-9638

FAX: (507) 452-9099

E-mail: [service@fusioncoatings.com](mailto:service@fusioncoatings.com)

Web: [www.fusioncoatings.com](http://www.fusioncoatings.com)



**Diagram #1**

1. Place receptacle in appropriate location with opening facing up.
2. Place plastic liner inside receptacle with opening facing up.
3. Attach grommet end of fabric tether to receptacle using one of the existing holes in the top portion of the receptacle as shown in Diagram #1 (fasteners not included).
4. Attach spring snap, on end of fabric tether, to tie-down ring on contour or dome top as shown in Diagram #1.
5. Place contour or dome top on receptacle.



## **WARNING**

Furniture should not be used other than for its intended purpose and should be inspected regularly for loose, missing, or broken hardware, and general instability. Furniture that is damaged or appears to be unstable should be removed from service and immediately repaired or replaced. Repairs should be made using only factory authorized parts and methods. 1-800-367-9638